



Hamilton Beach 70740 Mixing blade Replacement

Written By: David Gedeon



INTRODUCTION

If your blades are broken , or don't lock correctly to the bowl, use this guide to easily replace them.



PARTS:

- [Chop/Mix Blade, Black - 70670 \(Part # 990049101\)](#) (1)
-

Step 1 — Mixing blade



- Use your hands to remove the lid by lifting straight up.

Step 2



- Grasp the plastic part of the blade and lift straight up to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 02:26:12 AM.